


Switches bank
Interrupteur

Pulsantiere

Teclado
Кнопки включения

SWT303UN

UNIVERSALE

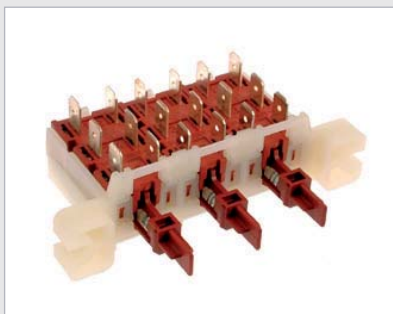

SWT304UN

UNIVERSALE

