

**HTR100AD**

ARDO

2200 W  
230 V

Original code:  
524007400  
524007401  
524007000

DISHWASHER



**HTR101BO**

CANDY

2150 W  
230 V

Original code:  
282746  
290501

DISHWASHER



**HTR100AR**

ARISTON

2200 W  
240 V

Original code:  
041752  
041093

DISHWASHER



**HTR102BO**

CANDY

2900 W  
230 V

Original code:  
287747

DISHWASHER



**HTR101AR**

ARISTON

2400 W  
230 V

Original code:  
041252

DISHWASHER




**HTR100CY**

CANDY

1950 W  
230 V

Original code:  
92201730

DISHWASHER

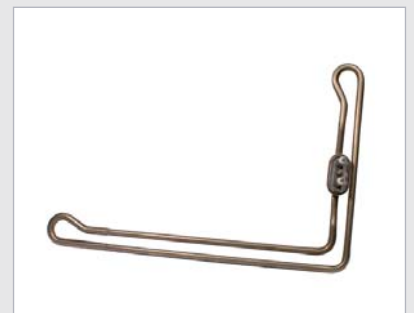

**HTR102AR**

ARISTON

2300 W  
230 V

Original code:  
144898  
046319  
066598

DISHWASHER



**HTR104CY**

CANDY

1950 W  
230 V

Original code:  
91200137

DISHWASHER



**HTR103AR**

ARISTON

1800 W  
230 V

Original code:  
144256  
066602

DISHWASHER



**HTR105CY**

CANDY

1950 W  
230 V

Original code:  
92218049

DISHWASHER



**HTR106CY**

CANDY

1950 W  
230 V

Original code:

41006831

DISHWASHER



**HTR102SM**

SMEG

1850 W  
230 V

Original code:

806890379

DISHWASHER



**HTR100ID**

INDESIT

2000 W  
230 V

Original code:

105287

105284

DISHWASHER



**HTR103SM**

SMEG

2100 W  
230 V

Original code:

806890358

DISHWASHER



**HTR101ID**

INDESIT

2500 W  
230 V

Original code:

105283

DISHWASHER



**HTR104SM**

SMEG

1800 W  
230 V

Original code:

806890241

DISHWASHER



**HTR100SM**

SMEG

2200 W  
230 V

Original code:

806890197

025665

DISHWASHER



**HTR100TB**

THOMSON - GORENJE

2400 W  
230 V

Original code:

750500010

31X3341

DISHWASHER



**HTR101SM**

SMEG

2100 W  
230 V

Original code:

806890271

DISHWASHER



**HTR100ZN**

ELECTROLUX - ZANUSSI

1900 W  
230 V

Original code:

1520166214

DISHWASHER



*Dishwasher Heating elements*  
*Résistances pour lave-vaisselle*

*Resistenze lavastoviglie*

*Resistencias lavavajillas*  
*ТЭНы для посудомоечных машин*

**HTR101ZN**

**ELECTROLUX - ZANUSSI**

**1900 W**  
**230 V**

**Original code:**  
**50232795000**  
**50248390002**  
**326201143**  
**326200986**

**DISHWASHER**

